
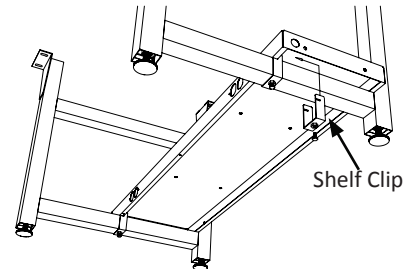


**UNDERTABLE SHELVING (BRACKETS OR PLATES):** Do not remove components from cartons prior to assembly. Use the packing list to locate components. Keep hardware kits in labeled packaging until ready to use.

### ASSEMBLY TIPS

- Shelf may be positioned anywhere on the lower crossbars when mounting with brackets. Shelf is attached in a pre-determined position when mounting on a mobile caster base.
- Mobile Plates are not symmetrical; line up pre-drilled holes on plates with Shelf and Caster base before fastening.

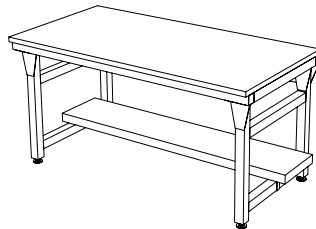

**ON CROSSMEMBERS WITH BRACKETS:** Set Shelf in desired position along lower crossbars of Leg Sections. Position shelf clips around lower crossbars with slits holding onto the return bend on the underside of the shelf. Tighten the set screw using the Hex Key found in 3016.



### HARDWARE INCLUDED

#### 3016

Shelf Clip (4)  
1/4-20 x 1/2 Cup Point Set Screw (2)  
1/8" Hex Key (1)

#### KIT-42

1/4-20 X 1/2" RHMS (8)  
1/2-20 Flange Nuts (8)

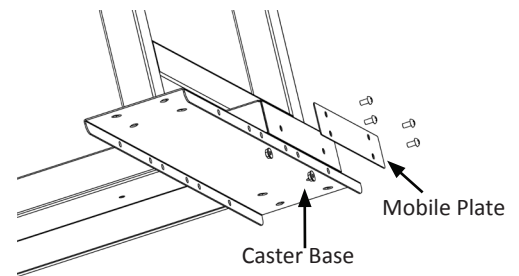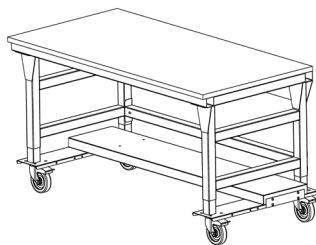

**ON MOBILE CASTER BASE WITH PLATES:** Position Shelf on lower crossmember of Leg Sections. Align holes on mobile plate with those on Shelf and on caster base, fasten using KIT-42.