

FIXED OR FLOATING ARTICULATING ARMS AND STIFFENER ASSEMBLY: Do not remove components from cartons prior to assembly. Use the packing list to locate components. Keep hardware kits in labeled packaging until ready to use.

ASSEMBLY TIPS

- Fasten Solid Uprights to rear of Leg Sections using KIT-08.
- Floating Arms may be mounted to table in a variety of ways. Refer to Flexmount Instructions for additional options (hardware & mounting provisions included).
- All Articulating Arms accept standard 75mm or 100mm flat-screen monitors.
- If additional arm extension is wanted for Fixed Height Arms, an extension arm is available to order.

HARDWARE INCLUDED

KIT-56


- 5/16" Flat Washers (2)
- 3/8-16 Flange Nuts (2)
- 3/8-16 x 3/4" HHCS (2)
- 1/8" Hex Key (1)

KIT-103


- 5/16" Flat Washers (2)
- 5/16-18 Flange Nuts (2)
- 3/8-16 x 3/4" HHCS (2)

KIT-08B


- 5/16-18 x 1-1/2" HHCS (4)
- 5/16-18 Flange Nuts (4)
- 5/16" Flat Washer (4)

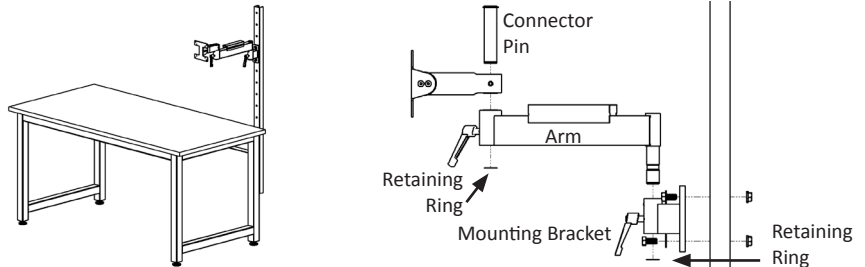

FIXED HEIGHT ARTICULATING ARM: Fasten mounting bracket on Upright using KIT-56. Insert arm section into mounting Bracket, fasten in place with retaining ring. Use connector pin to mount monitor attachment to arm section, fasten retaining ring.

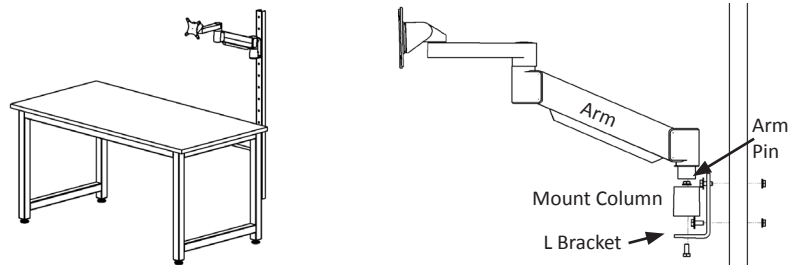

FLOATING ARTICULATING ARM: Fasten large "L" Bracket at desired location on Upright using KIT-103. Attach mount column to "L" Bracket using the 3/8-16 x 1/2" BHSCS and 3/8-16 Nut found in Flexmount hardware kit. Insert arm pin into mount column.

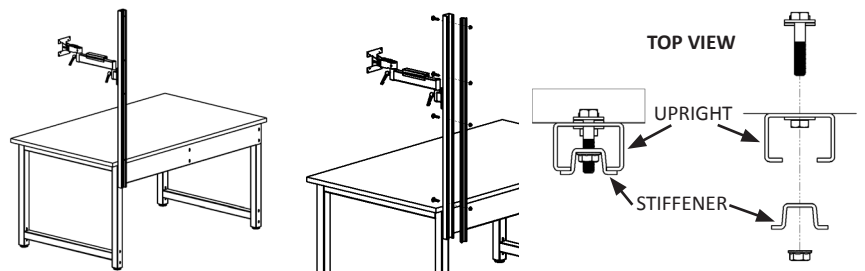

SINGLE UPRIGHT STIFFENER: For mounting Articulating Arm on Single Upright After arm has been mounted to Upright, place stiffener in rear channel of Upright, fasten using KIT-08B. Tighten to ensure stiffener is firmly set in Upright.