

**15A or 20A Powerstrips and Mounting Brackets:** Do not remove components from cartons prior to assembly. Use the packing list to locate components. Keep hardware kits in labeled packaging until ready to use.

## ASSEMBLY TIPS

- Fasten Solid Uprights to rear of Leg Sections using KIT-08.
- When one Upright is specified, mount Powerstrip using brackets.
- To Rear Mount Powerstrip on table with Uprights, follow Rear Mounting instructions, but position Upright between Leg and 31131 Bracket. Fasten with KIT-08.

## HARDWARE INCLUDED

### KIT-32A


1/4" Flat Washers (2)  
1/4-20 x 3/4 HHCS (2)

### KIT-23




5/16" Flat Washer (8)  
5/16-18 Flange Nuts (2)  
5/16-18 x 3/4" HHCS (6)

### KIT-08 (Rear Mount with Uprights)



5/16" Flat Washers (4)  
5/16-18 x 3/4" HHCS (4)

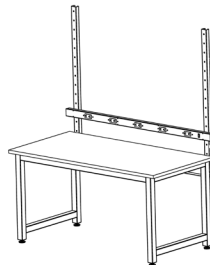



**MOUNTING TO UPRIGHTS:** Line up Powerstrip to desired location on Uprights, fasten with KIT-32A.

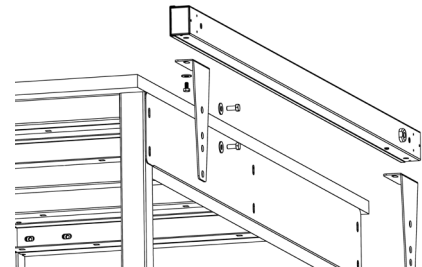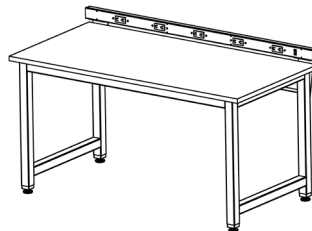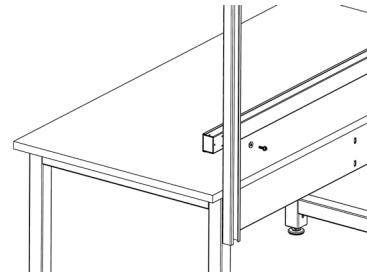

**MOUNTING WITH BRACKETS:** Align bracket lip to threaded inserts on bottom of Powerstrip, fasten 5/16-18 Flange Nut and Washer from KIT-23. Fasten Powerstrip/bracket assembly to Frame using remaining KIT-23 hardware.

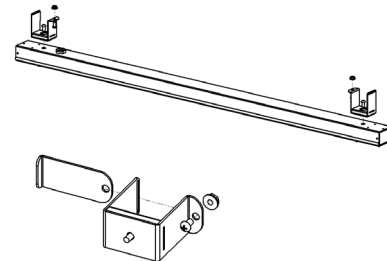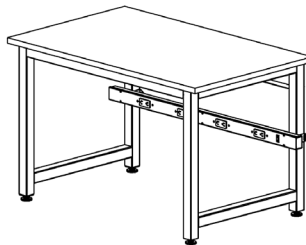

**MOUNTING ON LEG SECTIONS:** Mount leg bracket body to rear of Powerstrip using 1/4-20x1/2 RHMS. Hold Powerstrip/Bracket Assembly to Leg Sections (bracket body around Leg), slide rear plate through body and clamp to Leg using the 1/4-20 Flange Nut and 1/4-20x1/2 RHMS.

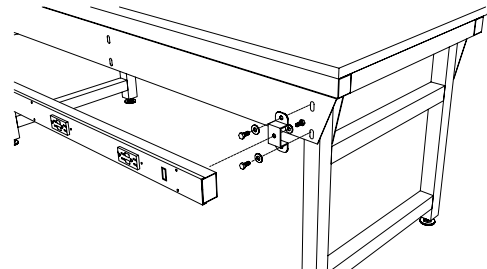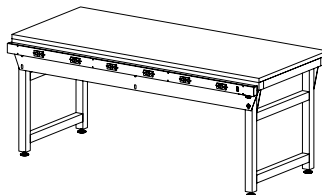

**REAR MOUNTING:** Mount 31131 Bracket to back of Powerstrip utilizing threaded inserts found in back of Powerstrip. Remove hardware from back of Swaybrace and set aside. Fasten Powerstrip/brackets to rear of Leg Sections using the previously removed hardware.