
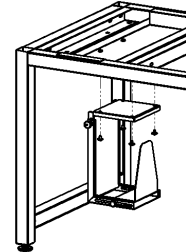


COMPUTER CADDY: Do not remove components from cartons prior to assembly. Use the packing list to locate components. Keep hardware kits in labeled packaging until ready to use.

ASSEMBLY TIPS

- Computer Caddy Frame Mounting Bracket should be set in place before Worksurface is attached.
- Please note that vertical height adjustment of the Caddy is limited when placed on upper crossbar.

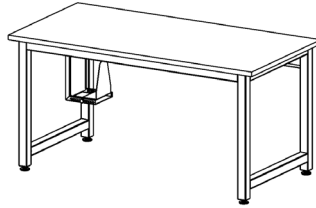

FRAME MOUNTED: Align holes in top of Caddy with frame mounted bracket. Fasten using KIT-09A.



HARDWARE INCLUDED

KIT-09A



1/4-20 x 1/2" RHMS (4)
1/4" Flat Washers (4)

KIT-16

1/4-20 X 1/2" RHMS (4)
1/4-20 Flange Nut (4)

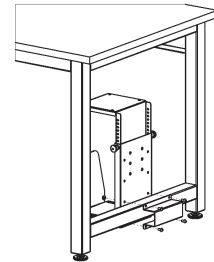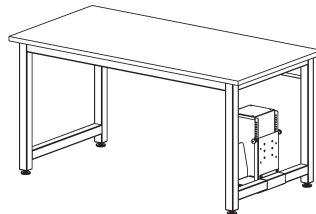

LEG MOUNTED: Position leg mount bracket on crossbar of Leg Section. Align the Caddy's holes with those in bracket and fasten using KIT-16.

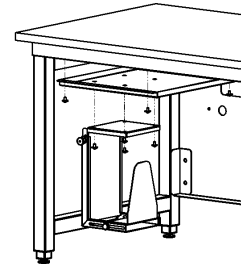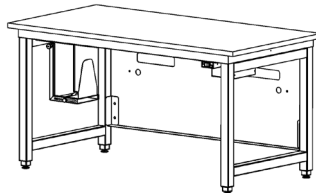

ON A MOTORIZED BENCH: Align mounting bracket to holes on the underside of Motorized Table, fasten with KIT-09A. Line up Caddy with threaded inserts in bracket and fasten with KIT-09A.