


**PARTS & HARDWARE INCLUDED:** Do not remove components from cartons prior to assembly. Use the packing list to locate components. Keep hardware kits in labeled packaging until ready to use.

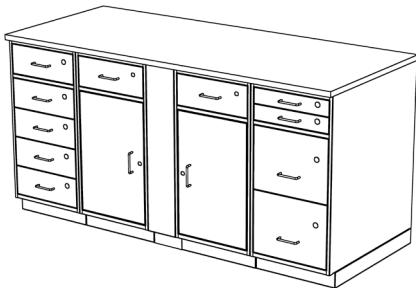

COMPONENTS	KIT-18*	P1700 (for Spacer)
Worksurface	10 X 3/4" HWHMS (4)	#8 x 1/2 Self Drilling Screws (2)
Cabinets	1/4" Flat Washer (4)	
Spacer (option)		

\*Use silicone adhesive to fasten Phenolic and Epoxy Resin Worksurfaces.

### ASSEMBLY TIPS

- It is recommended that Cabinet Workstations be assembled right-side up.
- Worksurfaces are used in multiple configurations; pre-drilled inserts will not be used.
- Make sure cabinets are level before fastening Worksurface.
- Mount Back and End Stops before tightening Worksurface hardware (if ordered).

### ABOUT CABINET DRAWERS


- To remove Drawers: to disconnect drawer slide from case, push one lever, found in back of slide, up and the other down.
- To insert Drawers: applying some pressure, slide back into case. DO NOT FORCE drawer.
- Drawer slides will be stiff on initial use. Open and close numerous times to loosen up the slides.



- 1 Position Cabinets in desired formation. Follow instructions below the drawing if using Cabinet Spacer(s).

**NOTE:** Remove drawers from Cabinet before moving to Step 2.

- 2 Position Worksurface flush to the rear edge of Cabinets. Using the round holes in top of cabinet as a template, align and fasten Cabinets to Worksurface using KIT-18\*.

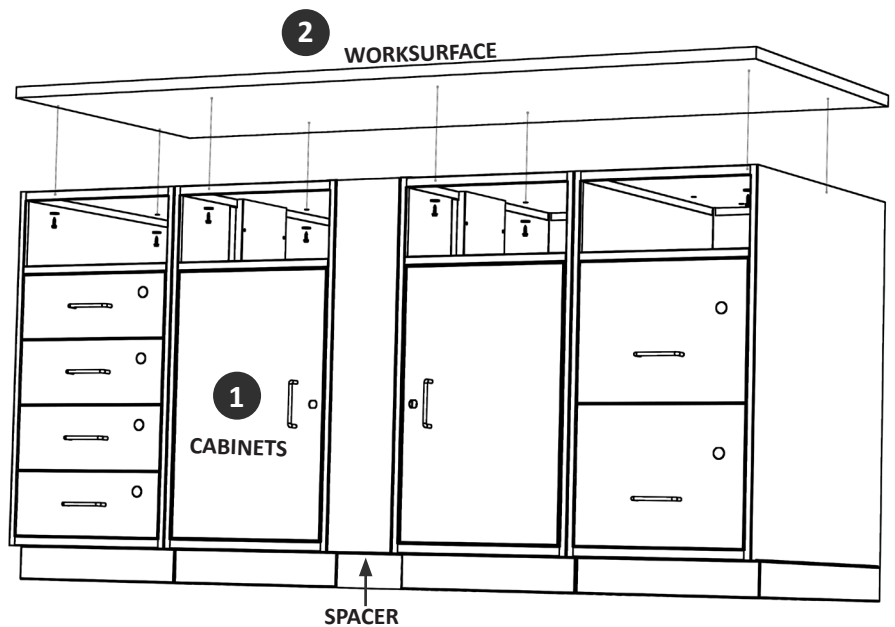

### ASSEMBLY WITH CABINET SPACER:

Follow Step One, adding Spacer between desired cabinets. Integrated pins at top of Spacer insert into holes at Top of Cabinets. Use P1700 Self Drilling Screws to fasten bottom of Spacer to Cabinet Base. Continue to Step 2.

